


RedGard® Fabric Membrane Mixer and Pipe Seal

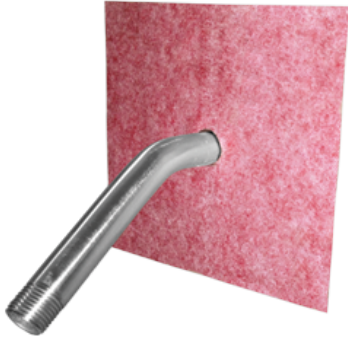

skin over. Only spread out as much as can be covered in about 5 minutes. Using the flat side of a trowel or a taping knife, embed the RedGard Fabric Membrane into the still wet thin-set. Work the trowel or taping knife at angles out and away from the center taking care to work out any air that may have been trapped when the sheet was placed.

Pipe and Valve Flashing: RedGard Fabric Mixing and Pipe Seal can be used to flash around any wall protrusions. It comes with a pre-cut hole measuring 1/2" but can be enlarged in the field with scissors or a knife. Hole in mixer and pipe seal should be tight around any protrusions. Fill any gaps or openings with Custom Shower Installation Systems Sealant (Polyurethane) for a watertight seal.

1. Product Name

RedGard® Fabric Membrane Mixer and Pipe Seal

2. Product Description

RedGard® Fabric Membrane Mixer and Pipe Seal is a fast and easy way to prepare and waterproof shower walls with piping and handles for tile installation. Apply the mixer and pipe seal for full coverage with the other members of the RedGard® Fabric Membrane product family to provide a durable protective layer for your tile installation.

Key Features

- Seal plumbing protrusions when preparing a shower to be tiled
- For use with RedGard® Fabric Membrane sheet
- Part of a 100% waterproof/vapor proof membrane system for walls and floors
- Opening can be cut to size

Suitable Substrates

- Concrete, cement mortar, masonry
- Cement Backerboard
- Gypsum Wallboard
- Properly prepared existing ceramic tile
- Lightweight tile wallboard

Benefits of Product in the Installation

- Waterproof, easy to cut, hang and adjust.
- Installs over cement backerboard, lightweight tile wallboard, or gypsum wallboard
- Helps prepare showers and other wet areas for tiling.
- Suitable for all tile types.
- For information on steam showers, contact Custom's Technical Services department.

Limitations to the Product

RedGard Fabric Membrane will not accommodate deflection greater than specified in TCNA guidelines and should not be used as a wear surface or left otherwise exposed to construction traffic.

Application of Product

All surfaces must be clean, smooth, and capable of supporting the finished tile installation. The thin-set mortar used for installing RedGard Fabric Membrane must be appropriate for the substrate, and should thoroughly embed in the RedGard Fabric Membrane. Apply thin-set to the intended surface using a minimum 1/4" x 3/16" (6 mm x 5 mm) V-notched trowel. Rougher surfaces may require a larger notched trowel. **Be sure to not let your thin-set mortar**

3. Size & Availability

Location	Item Code	Size	Package
USA	RFMMP	10" x 10" w/ 1/2" opening	1-pk/6 per case
Canada	CRFMMP	10" x 10" w/ 1/2" opening	1-pk/6 per case